



Energy Tablet

Neo 3 Lite

Guía Rápida/Quick Guide
Guide Rapide/Guía Rápida

<https://camo.githubusercontent.com/7e3a6153743a6a46cf7af793ff994dab371ceae/687474703a2f2f73746>

Introduction

Thank you for your trust in us and for buying the new Energy Tablet 10.1" Neo 3 Lite. We hope you will enjoy it. Your new tablet has a 10.1" (1024x600 pixels) capacitive multi-touch display, a Quad Core ARM Cortex A7 1.3 GHz processor, Bluetooth 4.0, Wi-Fi, VGA front camera and a 2 Mpx rear camera both with flash.. Before you start using your tablet we recommend you to read the complete manual of the Energy Tablet 10.1" Neo 3 Lite in the following link:

<https://www.energysistem.com/guide/42548> (<https://www.energysistem.com/guide/42548>) to enjoy your device with maximum performance.

Care and maintenance

- Do not expose your Energy Tablet to impacts, dust, direct sunlight, humidity or high temperatures.
- Do not use abrasive or corrosive cleaners.
- Keep the device clean and dust free using a soft, dry cloth.
- Charge the battery when the display shows the low battery icon. Only charge with the adapter included in your tablet.
- Do not disassemble the device. Any repairs must be carried out by Energy Sistem Soyntec S.A. qualified personnel only.

 
Key Features

- 10.1" TFT screen 16:9 (1024x600 pixels).
- 5 points capacitive multitouch screen.
- Quad Core ARM Cortex A7 1.3GHz processor
- 1GB RAM.
- 8GB GB internal memory expandable memory up to 64GB via microSD-HC/XC cards.
- Wi-Fi connection (802.11 b/g/n).
- Bluetooth 4.0.
- Built-in rear camera 2.0 Mpx.
- Built-in front camera VGA.
- USB-Host.
- USB-OTG .
- Built-in speaker 1w.
- Built-in omnidirectional microphone.
- Motion sensor (accelerometer).
- Battery capacity: 3.7v/6.000mAh.
- AC/DC adapter 100-240v 50-60Hz DC 5V/2A.

Product Content

- Energy Tablet 10.1" Neo 3 Lite.
- Quick guide.
- USB - microUSB cable for PC connection.
- USB-HOST cable for connecting external USB devices.
- AC/DC (Europlug) 5V 2A power adapter

General Overview

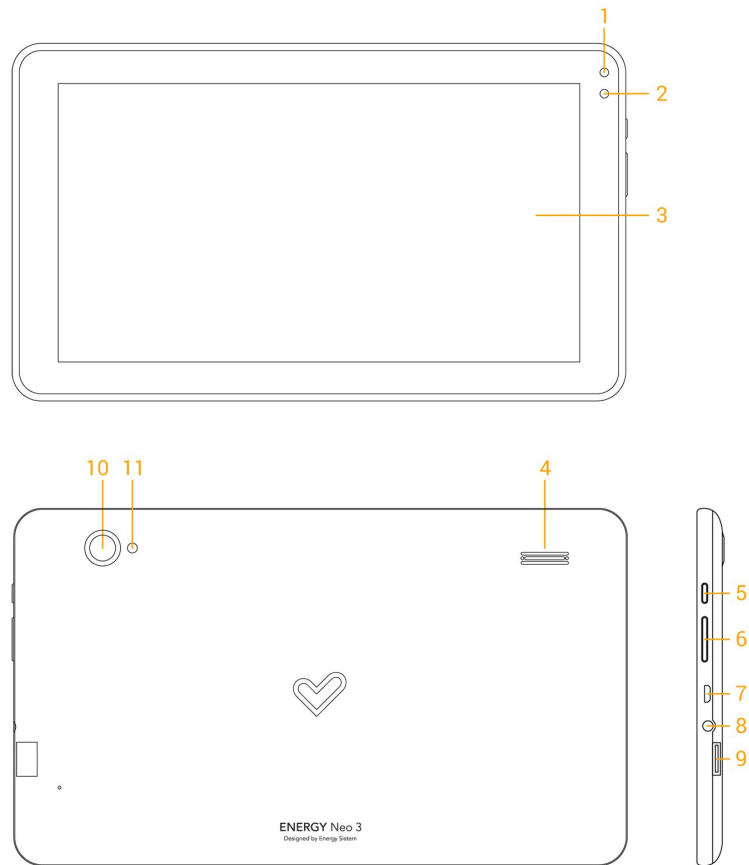

(<https://camo.githubusercontent.com/9af7aefb4f74c72206d7d9863813d872553e4a46/687474703a2f2f374d>)

1. Front camera
2. Flash
3. Touchscreen
4. Speaker
5. Power button
6. Volume button +/-
7. MicroUSB slot
8. Earphones output
9. MicroSD slot
10. Rear camera
11. Flash

Charging the device

Your Energy Tablet has a built-in rechargeable Li-Ion battery. Initially the battery is charged at the factory, but it is highly recommended that you perform a full charge before the first use. Recharge the battery by connecting the device to the outlet only using the AC/DC included with the product. The charging time ranges from 2 to 4 hours, depending on whether the device is off or running. To ensure these times, always charge your tablet via the USB cable and the power adapter included with the product.

Switching ON and OFF

To turn your Energy Tablet on, press the power button (3) for a few seconds. When the operating system has loaded, unlock the device to start using it. To do so, drag the icon with your finger. In order to turn off the device, hold the power button (3) until you see the power off menu, then select

Switch off. Briefly pressing the power button (3) locks/unlocks the device, turning the screen on/off and activating the power saving mode.

Main Gestures

Main gestures

- Tap

Touch the screen briefly



(<https://camo.githubusercontent.com/8a1a605385ab4126116678757bd133fca34ea6c9/687474703a2f2f7374>

- Double tap

Touch the screen twice quickly



(<https://camo.githubusercontent.com/db80dcae04fdc6774428bbf32f6e0e7e654a6f07/687474703a2f2f7374>

- Drag

Move your finger over the screen without losing contact



(<https://camo.githubusercontent.com/8b1d8c3b7c185b5d06538ec662397fd55d11853c/687474703a2f2f7374>

- Slide

Slide your finger quickly over the screen



(<https://camo.githubusercontent.com/19a82089a6bd24bb4557d05e1b706dc668d6865b/687474703a2f2f7374>

- Press

Touch the screen for an extended period of time



(<https://camo.githubusercontent.com/a773834656455845bf8b52066e8397a3957324ba/687474703a2f2f7374>

 
- Zoom

Zoom in and out the screen image



(<https://camo.githubusercontent.com/123d08d94943648cf48946d49af9f88b12d17de1/687474703a2f2f7374>

Main Screen

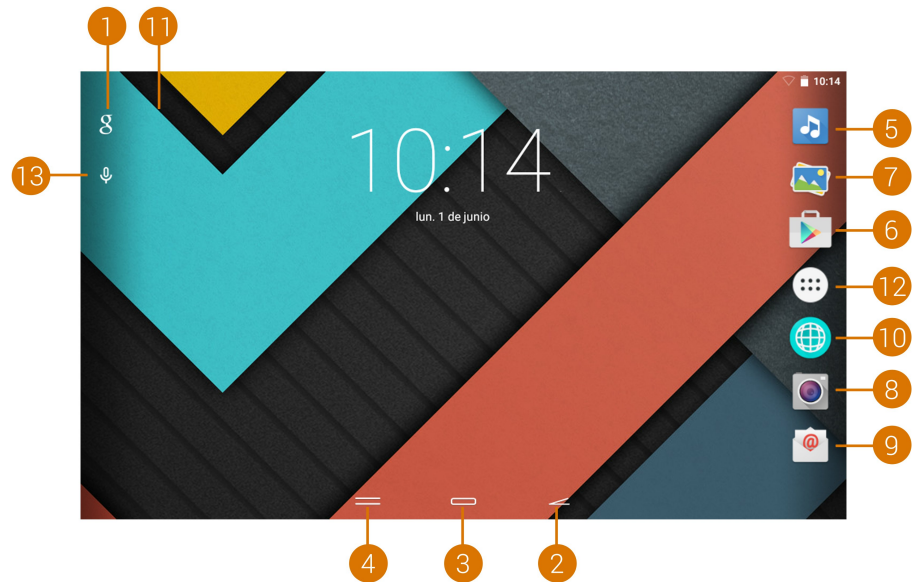


(<https://camo.githubusercontent.com/1840397928c69fcf42907fcb6403e462314c3cde/687474703a2f2f73746>)


1. **Search:** direct access to Google's™ search engine
2. **Back:** allow you to come back to the previous screen
3. **Home:** returns to the main screen
4. **Tasks:** displays recently opened applications
5. **Music:** music player.
6. **Play store™:** Google's™ app store
7. **Gallery:** Pictures: images gallery
8. **Camera:** access to the integrated camera
9. **Email:** e-mail client
10. **Internet:** web browser
11. **Status bar:** displays information about the wi-fi signal status, battery and clock. Pressing this area displays a larger version showing the date. Pressing it again accesses a basic settings menu that manages the Wi-Fi configuration, gyroscope, screen brightness, notifications and the full settings menu
12. **Main menu:** Button to access to the apps and widgets
13. **Voice Search:** Access to Google's(TM) voice search and much more

Widgets

 
In order to add a Widget to one of your desktops, keep pressing it (1), then select "WIDGETS" (2).

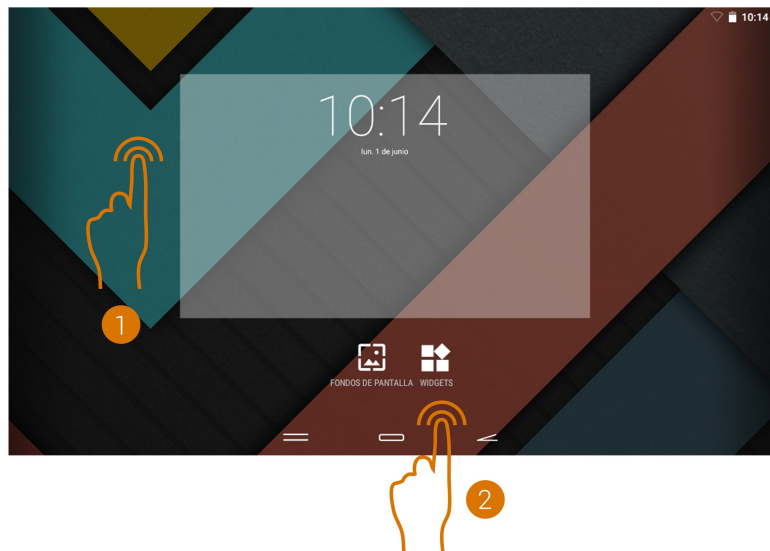

 
(<https://camo.githubusercontent.com/b23f282e3bba866a1ed1854a846b93b17a78e448/687474703a2f2f7374>)
 You can slide your finger to the left or right to see all your installed Widgets. Select the one you want to add to your desktop by pressing (4) on the widget and then releasing it on the desktop (5).

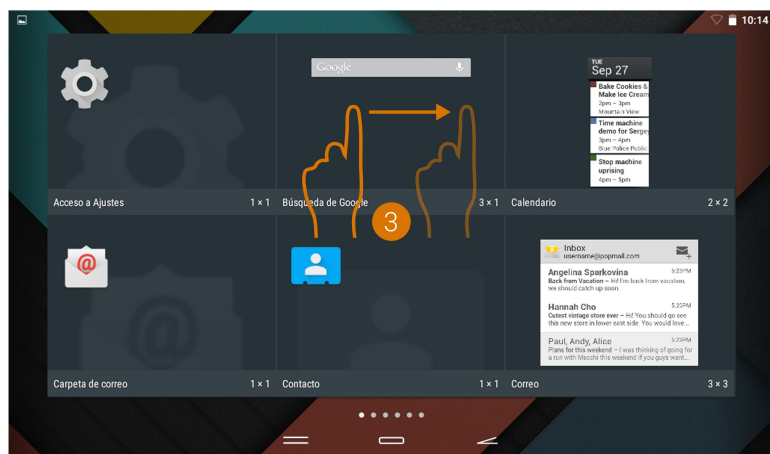

 
(<https://camo.githubusercontent.com/52b931f2c2e1ac3bdb175f7313fb658b197f9da0/687474703a2f2f7374>)

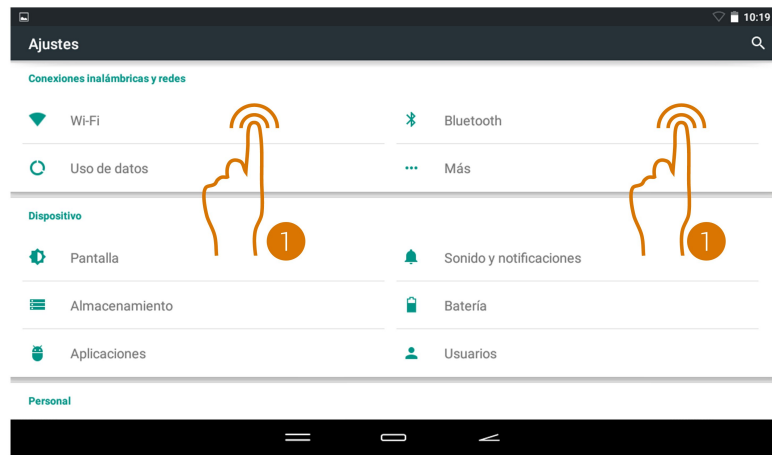

 (<https://camo.githubusercontent.com/b4e5cc86c77e3dca741297cbdb36d1f90457be75/687474703a2f2f7374/>)

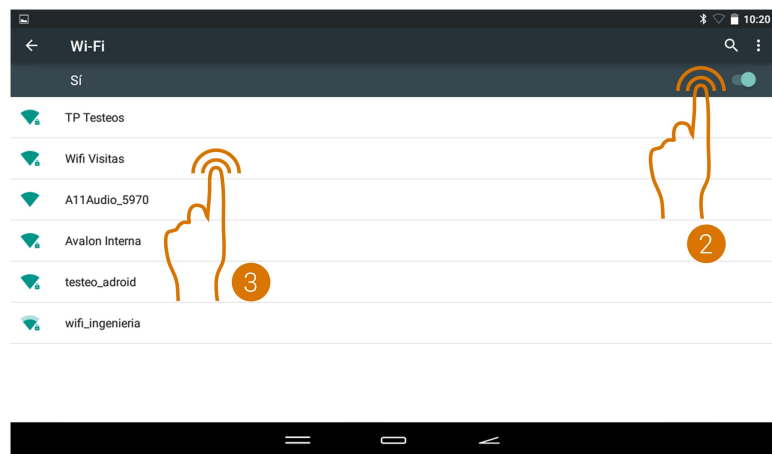

 (<https://camo.githubusercontent.com/dd346097b635ab096d4c4308b66e5d0c300da54b/687474703a2f2f7374/>)

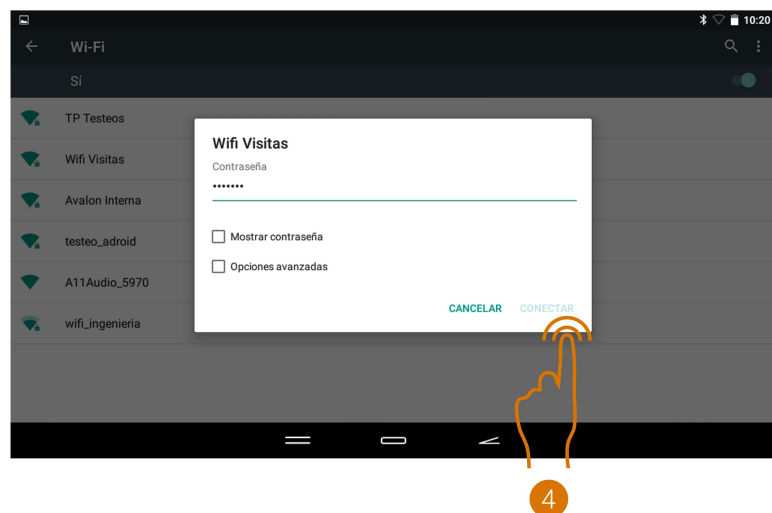

(<https://camo.githubusercontent.com/bbcab2d636094e27689062767d1a3834d7c914ea/687474703a2f2f7374/>)

Note: Your Energy Tablet is compatible with the following security and encryption standards: WEP, WPA, WPA2, TKIP and AES. Once you have completed the authentication process successfully, your Energy Tablet will save the Wi-Fi access data and you will be able to access the Internet. The device will remember the network and will automatically connect when it is available.

Pre-loaded applications

Internet Browser

Your new Energy Tablet has a powerful Web browser among the list of applications installed by default, with which you will be able to surf the Internet quickly and easily. Once the device is connected to a Wi-Fi or 3G network, press the browser icon located on the desktop or in the application menu to start the program. The system will load and display the home page set by default.



(<https://camo.githubusercontent.com/b5f35cbe9b58a2abca292bae126fa7922b448c4f/687474703a2f2f73746c>

1. Back
2. Forward
3. Reload
4. WEB address
5. Type
6. Tap on "Enter" key
7. New tab
8. Close tab
9. Options

 
E-Mail Client

Note: In order to know your account settings, ask your e-mail provider.




(<https://camo.githubusercontent.com/14493b3fdcf1c824e44d520930a973717a49d86b/687474703a2f2f7374>)

1. Selected folder
2. E-mails
3. New email
4. Search
5. Options

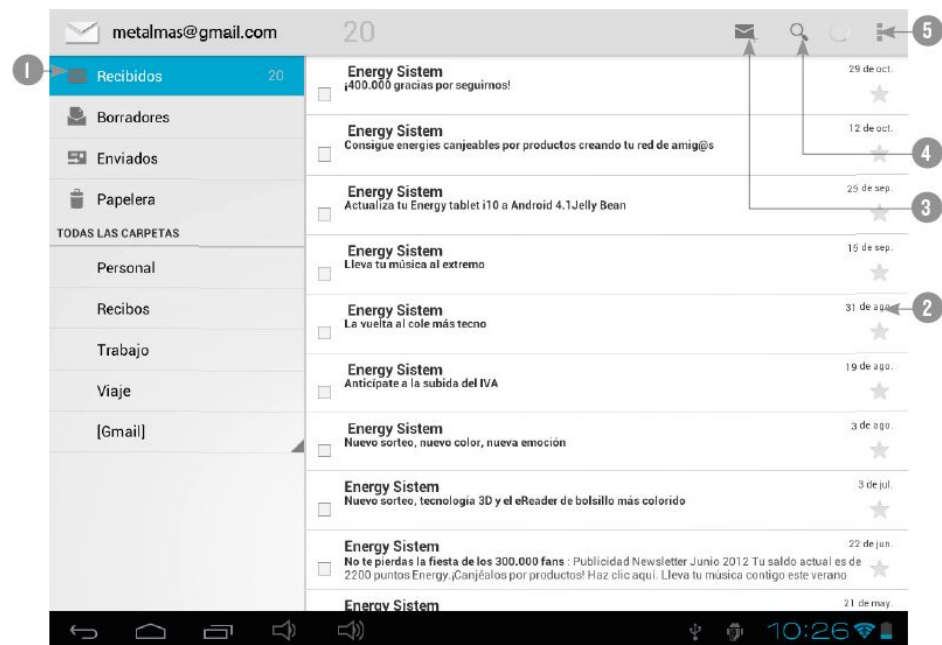

(<https://camo.githubusercontent.com/b40e9faa9c8357868810991d7ecba8db80d15acb/687474703a2f2f7374>)

 
Music Player

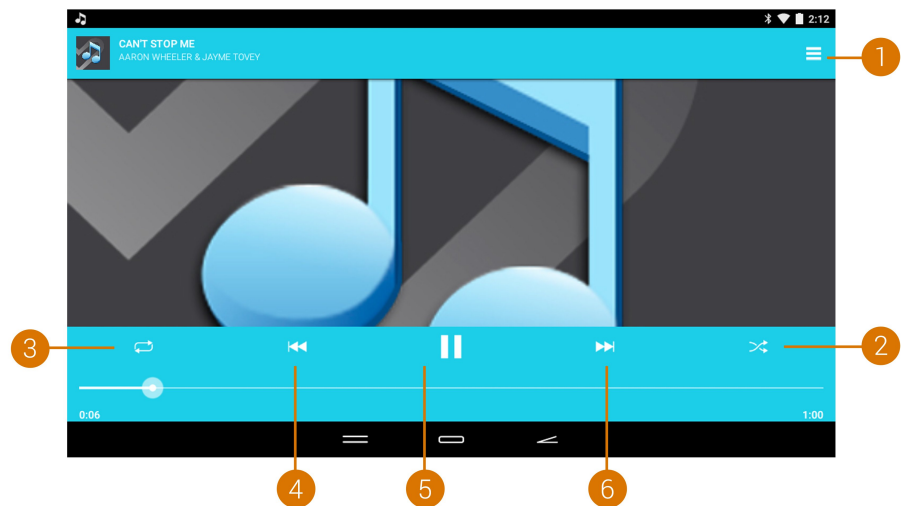

(<https://camo.githubusercontent.com/392afe923b6a373db7eda77de635c841638bb26c/687474703a2f2f7374>)

1. Playlist
2. Random playback
3. Repeat
4. Previous song
5. Play / pause
6. Next song
7. Decrease volume
8. Increase volume

 
Video Player

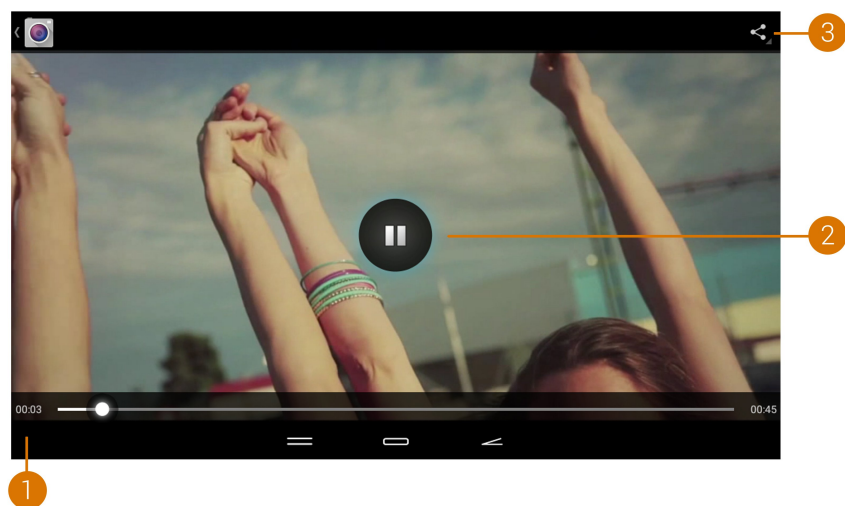

(<https://camo.githubusercontent.com/264896eb401af86f6834037a7393b2defcb50dd7/687474703a2f2f7374>)

1. Elapsed time
2. Play / Pause
3. Share

 Camera

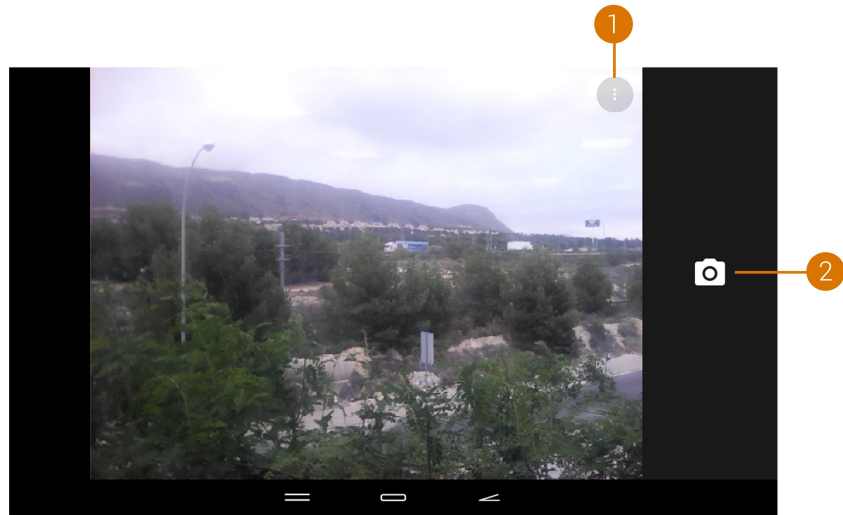


(<https://camo.githubusercontent.com/78c8dd196dd1e8aebc111bce775ee93a4265ddbc/687474703a2f2f7374>)

1. Setup
2. Shutter

Gallery: Images and Videos

To view the previous / next image or album, slide your finger to the left / right.

 To return to the main desktop, press the Back or Home button.

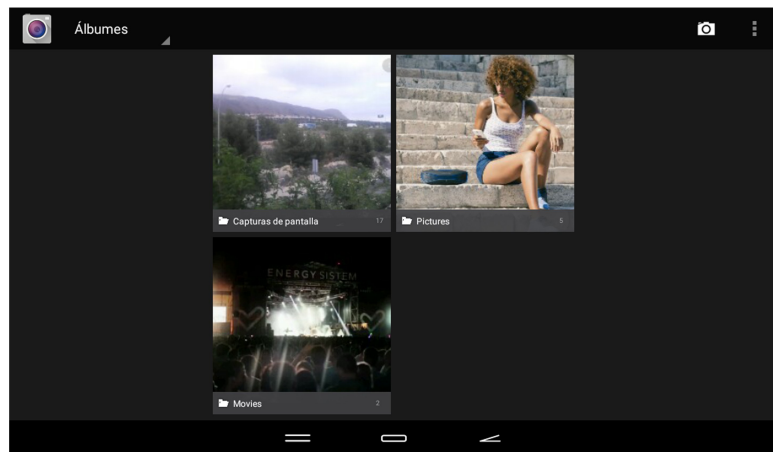

(<https://camo.githubusercontent.com/bf238d1e13c598091f618882f94bcc401e75e6ca/687474703a2f2f73746>)



(<https://camo.githubusercontent.com/a2e605f02e81ac01ceeeb9bfa6e55bd3e7394bbc/687474703a2f2f73746>)

Updating

Your Energy Tablet has an operating system based on Android™ which you can reinstall or update if necessary. Updates will be made via OTA (Over-The-Air) by default, so your Energy Tablet will automatically connect to our servers, download the file and install the new software as soon as it is released.

You can also update your Energy Tablet using your PC. The process is simple but has to be done carefully and only when it is really necessary. If you notice that the device crashes, restarts unexpectedly or you have problems accessing the content of the internal storage memory, you should reinstall or update the operating system to a newer compatible version if available.

Follow these steps to install:

1. Make sure that the battery of your Energy Tablet is fully charged. Otherwise, plug your Energy Tablet to the external power using the provided AC/DC power adapter and wait until the battery is fully charged.
2. Access the www.energysystem.com (<http://www.energysystem.com>) website from your computer.
3. Enter the "Support" section and choose the type of product "Tablet".
4. Choose your Energy Tablet model from the dropdown list that appears and then download the latest Android™ operating system version available.

Important:

Make sure that the operating system version you are downloading is specific for your model and serial number, otherwise you could damage the device.

5. Unzip the file on your computer.
6. Open the text file included with the download and follow the instructions to install the new operating system on your Energy Tablet.

Troubleshooting

1. Why can't I play some MP3 files?

The MP3 file must follow the "layer 3" standard for MPEG1, MPEG2 and MPEG 2.5 formats. Otherwise, it must be converted using a specific software.

2. My Energy Tablet does not turn on, what can I do?

Make sure that the battery is charged enough to power the device. If after leaving the device charging for at least 30 minutes the problem continues, there may be a problem with the installed operating system. Please, refer to the "Updating" section of this manual.

3. Why can't I play some WMA files?

Make sure you are not trying to play WMA file with DRM.

4. Why can't I see my video, image or text files when using the music player?

Generally, applications only display the files supported by the program. Therefore, while you browse the folders using a specific application, you can only see the files associated to that program (songs in the music player, videos in the movie player, etc). In order to see all the files stored in the internal memory, start the FileXplorer application from the application menu.

5. Which video formats are compatible with my Energy Tablet?

Your Energy Tablet can play multiple video formats without recoding.

6. Why can't I display my .jpg images?

Many digital cameras and image editing software add hidden data to .jpg files. This can prevent your Energy Tablet from loading the images. Try to delete them and save the image with another name.

7. Sometimes the screen turns black and the device does not respond.

It is always better to reboot the device through one of the options available within the system, but if that is not possible, remove the battery, put it back again and press the power button.

8. The built-in memory of the Energy Tablet is lower than the specified in the specifications. Why?

The Android™ operating system and the preinstalled applications need approximately 1.5GB to work. Therefore, the available memory for additional data is less than the specified.

9. I updated the firmware but I no longer have any multimedia files nor wallpapers. How can I retrieve the contents that came preinstalled?

Before any system update, we recommend making a backup of everything you want to keep. In www.energysistem.com (<http://www.energysistem.com>), you will find not only all the content that came preinstalled in your Energy Tablet, but many more multimedia files and additional wallpapers.

10. What must I do to install an application?

First, make sure that the file has the Android™ application extension (.APK). Android™ will ask you to activate the application installation from "Unknown sources", this option is disabled for safety. To authorize the installation of applications, you only have to follow the instructions on the screen the first time you try to install an application: Settings / Security / Unknown sources (activate).

11. How long does the battery last?

It depends largely on the use, such as the screen brightness, use of headphones or speaker, if the Wi-Fi connection is enabled or disabled and the power consumption required by the apps, games, etc.

```
{ "documentation_url": "https://developer.github.com/v3/#abuse-rate-limits", "message": "You have triggered an abuse detection mechanism. Please wait a few minutes before you try again." } {  
  "documentation_url": "https://developer.github.com/v3/#abuse-rate-limits", "message": "You have triggered an abuse detection mechanism. Please wait a few minutes before you try again." } {  
  "documentation_url": "https://developer.github.com/v3/#abuse-rate-limits", "message": "You have triggered an abuse detection mechanism. Please wait a few minutes before you try again." }
```